

REPLACEMENT PARTS GUIDE

316GR Skid Steer Loader (PIN: 1P0316G ___ J435000-) (PIN: 1P0316G ___ G435000-)



DUST UNLOADER VALVE
M89679
 Interval (hrs) - As Required.

CAB RECIRCULATION AIR FILTER ELEMENT (IF EQUIPPED)
AT359416
 Interval (hrs) - As Required.

CAB FRESH AIR FILTER ELEMENT (IF EQUIPPED)
AT441536
 Interval (hrs) - As Required.

HYDRAULIC OIL RESERVOIR BREATHER
AT443309
 Interval (hrs) - 1000.

HYDRAULIC OIL FILTER ELEMENT
AT314164
 Interval (hrs) - 1000.

ENGINE ROCKER ARM COVER GASKET
MIU802182
 Interval (hrs) - 1500.

PRIMARY FUEL FILTER AND WATER SEPARATOR
MIU802421
 Interval (hrs) - 1000.

FILTER PAK
AT535120 (IT4) (Include parts (4, 5, 8, 9, 10, 12, 13, 15))
 Interval (hrs) - 1000.

FILTER PAK
AT535118 (FT4) (Include parts (4, 5, 7, 8, 9, 10, 12, 14))
 Interval (hrs) - 1000.

ENGINE AIR FILTER ELEMENT—PRIMARY
AT338105
 Interval (hrs) - As Required.

ENGINE AIR FILTER ELEMENT - SECONDARY
AT336803
 Interval (hrs) - As Required.

FUEL TANK BREATHER
H216169
 Interval (hrs) - 1000.

DIESEL PARTICULATE FILTER (COMPONENT OF EXHAUST FILTER)
MIU802216
 Interval (hrs) - As Required.

ENGINE OIL FILTER ELEMENT
MIU800650
 Interval (hrs) - 1000.

FINAL FUEL FILTER ELEMENT
MIU801090
 Interval (hrs) - 1000.

FINAL FUEL FILTER
MIU805005
 Interval (hrs) - 500.

PRIMARY FUEL FILTER AND WATER SEPARATOR
MIU801025
 Interval (hrs) - 1000.

FILTER PAK
AT535119 (IT4) (Include parts (12, 13, 15))
 Interval (hrs) - 500.

FILTER PAK
AT535117 (FT4) (Include parts (7, 12, 14))
 Interval (hrs) - 500.



OILS AND CAPACITIES INFORMATION

316GR Skid Steer Loader (PIN: 1P0316G ___ J435000-) (PIN: 1P0316G ___ G435000-)

Part Description		Qty or capacity	Change Interval In Hours
John Deere Plus-50™ II Engine Oil ²		7.5 L (2.0 gal)	500
John Deere Hydrau™ Hydraulic and Hydrostatic System Oil ²		22.7 L (6.0 gal)	1000
John Deere Hy-Gard™ Oil ² (per side)		14.3 L (3.8 gal)	1000
John Deere Cool-Gard™ II Pre-Mix (316GR and 318G only)		12.0 L (3.2 gal)	6000
Fluid Analysis Kits ⁴			
Part Description	Part Number	Qty or capacity	Change Interval In Hours
Diesel Engine Oil	AT346594	1	250
Hydraulic Oil	TY27329	1	500
Diesel Fuel	TY27329	1	500
Engine Coolant	TY27787	1	500
² See operator's manual for recommended oil type and oil viscosities based on operating temperatures. ³ Based on fluid analysis results, intervals may need to be adjusted for operating conditions. Consult an authorized John Deere dealer.			

Plus-50 is a trademark of Deere & Company

Hy-Gard is a trademark of Deere & Company

Hydrau is a trademark of Deere & Company

COOL-GARD is a trademark of Deere & Company



SERVICE INTERVALS

316GR Skid Steer Loader (PIN: 1P0316G J435000-) (PIN: 1P0316G G435000-)

As Required	
<input type="checkbox"/> Check and clean cooling package	<input type="checkbox"/> Check fuel tank breather
<input type="checkbox"/> Check tire pressure (312GR, 314G, 316GR, and 318G only)	<input type="checkbox"/> Replace primary and secondary engine air filter elements
<input type="checkbox"/> Check wheel lug nut torque (312GR, 314G, 316GR, and 318G only)	<input type="checkbox"/> Check and drain primary fuel filter and water separator
<input type="checkbox"/> Replace cab fresh air filter element (if equipped)	<input type="checkbox"/> Check accessory drive belt
<input type="checkbox"/> Replace cab recirculation air filter element (if equipped)	<input type="checkbox"/> Service exhaust filter
<input type="checkbox"/> Lubricate steering centering mechanism (if equipped) ¹	
Every 10 Hours or Daily	
<input type="checkbox"/> Check engine oil level	<input type="checkbox"/> Check hydraulic oil level
<input type="checkbox"/> Check coolant level	<input type="checkbox"/> Lubricate boom linkage, cylinder, and Quik-Tatch™ pivot points
Every 50 Hours	
<input type="checkbox"/> Check and clean dust unloader valve	<input type="checkbox"/> Lubricate Quik-Tatch™ engagement pins
<input type="checkbox"/> Check track tension (317G only)	
Every 100 Hours	
<input type="checkbox"/> Check and adjust accessory drive belt tension (machines without air conditioning only)	
Every 250 Hours	
<input type="checkbox"/> Take engine oil sample	
Every 500 Hours	
<input type="checkbox"/> Drain and refill engine oil and replace filter	<input type="checkbox"/> Take hydraulic oil sample
<input type="checkbox"/> Replace primary fuel filter and water separator	<input type="checkbox"/> Take engine coolant sample
<input type="checkbox"/> Replace final fuel filter	<input type="checkbox"/> Take diesel fuel sample
<input type="checkbox"/> Drain water and sediment from fuel tank	<input type="checkbox"/> Lubricate steering linkage (if equipped) ¹
<input type="checkbox"/> Check chain case oil level (312GR, 314G, 316GR, and 318G only)	<input type="checkbox"/> Lubricate foot pedals (if equipped) ¹
Every 1000 Hours	
<input type="checkbox"/> Drain and refill hydraulic oil and replace filter	<input type="checkbox"/> Check coolant condition
<input type="checkbox"/> Replace hydraulic oil reservoir breather	<input type="checkbox"/> Replace fuel tank breather
<input type="checkbox"/> Drain and refill chain case oil (312GR, 314G, 316GR, and 318G only)	<input type="checkbox"/> Drain and refill hydrostatic motor brake cavity oil (317G only)
Every 1500 Hours	
<input type="checkbox"/> Check and adjust engine valve lash	
Every 6000 Hours	
<input type="checkbox"/> Drain, flush, and refill cooling system	

