

REPLACEMENT PARTS GUIDE

330G Skid Steer Loader (PIN: 1T0330G__E314413 - 387237)



CAB RECIRCULATION AIR FILTER ELEMENT (IF EQUIPPED)

[AT359416](#)

CAB FRESH AIR FILTER ELEMENT (IF EQUIPPED)

[AT441536](#)

Interval (hrs) - As Required.

DUST UNLOADER VALVE

[R48568](#)

Interval (hrs) - As Required.

HYDRAULIC OIL FILTER

[AT314164](#)

Interval (hrs) - 1000.

HYDRAULIC OIL FILTER ELEMENT (IF EQUIPPED)

[AT495722](#)

Interval (hrs) - 1000.

HYDRAULIC OIL RESERVOIR BREATHER

[AT101565](#)

Interval (hrs) - 500.

FUEL TANK BREATHER

[H216169](#)

Interval (hrs) - 1000.

AUXILIARY FUEL TANK BREATHER (331G AND 333G ONLY)

[H216169](#)

Interval (hrs) - 1000.

DIESEL EXHAUST FLUID (DEF) TANK BREATHER

[H216169](#)

Interval (hrs) - 4000.

ENGINE AIR FILTER ELEMENT PRIMARY

[KV16429](#)

ENGINE AIR FILTER ELEMENT SECONDARY

[AT171854](#)

Interval (hrs) - As Required.

ENGINE OIL FILTER

[MIU800650](#)

Interval (hrs) - 500.

FINAL FUEL FILTER

[MIU805005](#)

Interval (hrs) - 500.

ENGINE ROCKER ARM COVER GASKET

[MIU802567](#)

Interval (hrs) - 1500.

PRIMARY FUEL FILTER AND WATER SEPARATOR

[MIU802421](#)

Interval (hrs) - 500.

FILTER PAK

[AT535106](#) (Include parts (5, 10, 11, 13))

Interval (hrs) - 500.

FILTER PAK

[AT535108](#) (Include parts (3, 5, 6, 9, 10, 11, 13))

Interval (hrs) - 1000.



CLICK PART NUMBER TO BUY

*See operator's manual for additional details.

OILS AND CAPACITIES INFORMATION

330G Skid Steer Loader (PIN: 1T0330G__E314413 - 387237)

Part Description	Qty or capacity	Change Interval In Hours	
John Deere Plus-50™ II Engine Oil ¹	12.6 L (3.3 gal)	500	
John Deere Hydrau™ Hydraulic and Hydrostatic Oil ¹	33.1 L (8.7 gal)	1000	
Hy-Gard™ Chain Case Oil ¹ (per side)	20.8 L (5.5 gal)	1000	
John Deere Cool-Gard™ II Pre-Mix	14.9 L (3.9 gal)	6000	
Fluid Analysis Kits ²			
Part Description	Part Number	Qty or capacity	Change Interval In Hours
Diesel Engine Oil	AT346594	1	250
Hydraulic Oil	TY27329	1	500
Diesel Fuel	TY27329	1	500
Engine Coolant	TY27787	1	500
¹ Hydraulic oil reservoir breather is an integral part of the hydraulic reservoir fill cap. ² See operator's manual for recommended oil type and oil viscosities based on operating temperatures. ³ Based on fluid analysis results, intervals may need to be adjusted for operating conditions. Consult an authorized John Deere dealer.			

Plus-50 is a trademark of Deere & Company
 Hy-Gard is a trademark of Deere & Company
 Hydrau is a trademark of Deere & Company
 COOL-GARD is a trademark of Deere & Company



Service Intervals

As Required	
<input type="checkbox"/> Check and clean cooling package	<input type="checkbox"/> Replace cab fresh air filter (if equipped)
<input type="checkbox"/> Check tire pressure	<input type="checkbox"/> Replace cab recirculation air filter (if equipped)
<input type="checkbox"/> Replace primary engine air filter element	<input type="checkbox"/> Check wheel lug nut torque
<input type="checkbox"/> Replace secondary engine air filter element (every 3rd primary element replacement or as required)	<input type="checkbox"/> Check accessory drive belt
<input type="checkbox"/> Check fuel tank breather	<input type="checkbox"/> Service exhaust filter
<input type="checkbox"/> Check and drain primary fuel filter and water separator	<input type="checkbox"/> Check and adjust steering mistracking
<input type="checkbox"/> Drain water and sediment from fuel tank	
Every 10 Hours or Daily	
<input type="checkbox"/> Check engine oil level	<input type="checkbox"/> Check hydraulic oil level
<input type="checkbox"/> Check coolant level	<input type="checkbox"/> Lubricate boom linkage, cylinder pivot points, and Quik-Tatch™ linkage
Every 50 Hours	
<input type="checkbox"/> Check and clean dust unloader valve	
Every 250 Hours	
<input type="checkbox"/> Take engine oil sample	
Every 500 Hours	
<input type="checkbox"/> Drain and refill engine oil and replace filter	<input type="checkbox"/> Check chain case oil level
<input type="checkbox"/> Replace primary fuel filter and water separator	<input type="checkbox"/> Take hydraulic oil sample
<input type="checkbox"/> Replace final fuel filter	<input type="checkbox"/> Take diesel fuel sample
<input type="checkbox"/> Replace hydraulic oil reservoir breather	<input type="checkbox"/> Take engine coolant sample
Every 1000 Hours	
<input type="checkbox"/> Check coolant condition	<input type="checkbox"/> Drain and refill hydraulic oil and replace hydraulic oil filter
<input type="checkbox"/> Replace fuel tank breather	<input type="checkbox"/> Drain and refill chain case oil
Every 1500 Hours	
<input type="checkbox"/> Check and adjust engine valve lash	
Every 6000 Hours	
<input type="checkbox"/> Drain and refill cooling system	

