

# REPLACEMENT PARTS GUIDE

## 2027R Compact Utility Tractor

### ENGINE



**ENGINE OIL**  
[TY26669](#) (10W-30 PLUS-50™ II) (3.4 L (3.6 qt))  
 (CRANKCASE WITH FILTER)

After First 50 Hours and Change Every 200 Hrs or Annually, whichever comes first.



**FUEL FILTER**  
[MIU800645](#)

Change after every 400 hrs or Annually.



**AIR FILTER**  
[M131802](#) (PRIMARY)  
[M131803](#) (SECONDARY)

Change after every 600 hrs or Annually.



**JD MULTI PURPOSE HD LITHIUM  
 COMPLEX GREASE**  
[TY24416](#)  
**GREASE GUN**  
[TY26183](#)

Change As Required.



**OIL FILTER**  
[M806419](#)

After First 50 Hours and Change Every 200 Hrs or Annually, whichever comes first.



**FUEL-WATER SEPARATOR**  
[AM881823](#) (SEPARATOR)  
[M811032](#) (FILTER ELEMENT)

Change after every 400 Hrs or Annually.



**FILTER PAK**  
[LVA21201](#)



### ELECTRICAL

#### KEY

[LVA803606](#)

#### IGNITION SWITCH

[LVA803707](#)

#### BATTERY

[TY26498B](#) (12 V)

#### HEADLIGHT

[57M7166](#) (12 V 60/55 W)

### CAB

#### CAB AIR FILTER

[HF235525260](#)

Change every 50 hours.

### FUEL & AIR

#### FILLER CAP

[TCU32729](#)

### AXLE

#### FRONT AXLE OIL

[TY22035](#) (John Deere Low Viscosity Hy-Gard™) (3.9 L (4.1 qt))  
 Change after every 600 hrs or Annually.

### TRANSMISSION/ HYDRAULIC

#### TRANSMISSION OIL

[TY22000](#) (John Deere Low Viscosity Hy-Gard™) (17.5 L (4.6 gal))

After First 50 Hours and Change Every 200 Hrs or Annually, whichever comes first.

#### OIL FILTER

[LUV800097](#) (HYDRAULIC)

After First 50 Hours and Change Every 200 Hrs or Annually, whichever comes first.

#### V-BELT

[M801821](#) (LGTH = 965 mm)