

REPLACEMENT PARTS GUIDE

2032R Tractor (MY22-) (PIN: 1LV2032R*NP100000-) (Worldwide Edition)

ENGINE



OIL FILTER
[M806419](#)



ENGINE OIL
[TY26668](#) (John Deere Plus-50™ II Premium (10W-30)) (4.5 L (4.7 qt) - With Filter)

Change every 400 hours or annually, whichever comes first.

1



PRIMARY AIR FILTER
[UC28887](#)



SECONDARY AIR FILTER
[UC28888](#)

Change every 600 hours.

2



DIESEL PARTICULATE FILTER
[MIU803093](#)

3



JOHN DEERE MULTI-PURPOSE HD LITHIUM COMPLEX GREASE
[TY24416](#)



PISTOL-GRIP BLACK GREASE GUN
[TY26517](#)

Change As Required.



FUEL-WATER SEPARATOR
[AM881823](#) (Fuel-water Separatot Kit)



[M811032](#) (Fuel-water Separator Filter Element)

4



FUEL FILTER
[MIU803127](#) (Final Fuel Filter)



[MIU800645](#) (Primary Fuel Filter)

Change every 400 hours or annually, whichever comes first.

5



FAN BELT DRIVE (V-BELT)
[LVU30203](#) (Engine AV13 Section, LGTH = 995 mm)

6



FILTER PAK
[TA26997](#)



ELECTRICAL



HEAD LIGHT- BULB
[AD2062R](#) (12.8 V, 27 W)

7



IGNITION KEY
[LVU33004](#)

8



ROTARY SWITCH
[LVA21501](#) (14 V)

9



WET DISCHARGE BATTERY
[TY27831B](#) (12 V, 45 AH, 550 CCA, 51R BCI)

10

FUEL & AIR



FUEL TANK FILLER CAP
[AL213202](#)

11

TRANSMISSION/ HYDRAULIC



TRANSMISSION OIL FILTER
[LVA14703](#)

12

Change every 400 hours.



HYDRAULIC OIL FILTER
[LVA16054](#)

13

Change every 400 hours.



TRANSMISSION AND HYDRAULIC OIL
[TY22062](#) (John Deere Hy-Gard™)
[TY22000](#) (John Deere Low Hy-Gard™) (23.5 L (24.8 qt))

14

Change every 1200 hours or 3 years, whichever comes first.

AXLE



FRONT AXLE OIL
[TY22062](#) (John Deere Hy-Gard™)
[TY22000](#) (John Deere Low Hy-Gard™) (3.8 L (4.0 qt))

15

Change every 600 hrs.



TIE ROD
[LVA15994](#) (ASSEMBLY)
[LVA15995](#) (LH)
[LVA15996](#) (RH)

16