

REPLACEMENT PARTS GUIDE

2032R Tractor (GH100008-) (North America Edition)

ENGINE



ENGINE OIL
TY26669 (10W-30 PLUS-50™ II)
(4.3 L (4.5 qt) WITH FILTER)
 Change every 200 Hrs or Annually.



FUEL FILTER
MIU800645 (PRIMARY)
MIU803127 (SECONDARY)
 Change every 400 Hrs or Annually.



AIR FILTER
M131802 (PRIMARY)
M131803 (SECONDARY)
 Change every 400 Hrs or Annually.



JD MULTI PURPOSE HD LITHIUM COMPLEX GREASE
TY6341
GREASE GUN
TY26183
 Change As Required.



ENGINE OIL FILTER
M806419
 Change every 200 Hrs or Annually



FUEL ELEMENT
AM881823 (FUEL & WATER SEPARATOR)
M811032 (FILTER ELEMENT)
 Change every 400 Hrs or Annually.



DIESEL PARTICULATE FILTER
MIU803093



FILTER PAK
LVA23615



ELECTRICAL



KEY
LUV33004



ROTARY SWITCH
LVA21501



BATTERY
TY27831B (12 V)



LED WORK LIGHT, OOS
AM143579 (12 V)



HEADLIGHT
R136239 (12 V / 55 W)

FUEL & AIR



FILLER CAP
AL213202

AXLE



TIE ROD
LVA15994 (ASSEMBLY)
LVA15996 (RH)
LVA15995 (LH)



FRONT AXLE OIL
TY22035 (John Deere Low Viscosity Hy-Gard™) (3.8L (4 qt))
 Change every 50/400/600 Hrs.

TRANSMISSION/ HYDRAULIC



TRANSMISSION/HYDRAULIC OIL
TY22035 (23.5 L (24.8 qt))
 Change every 400 Hrs or Annually.



OIL FILTER
LVA14703 (TRANSMISSION)
LVA16054 (HYDRAULIC)
 Change every 200 hours.