

# REPLACEMENT PARTS GUIDE

2038R Compact Utility Tractor (MY20- ) (PIN: 1LV2038R\*LL300001- )(Worldwide Edition)

**ENGINE**

**ENGINE OIL**  
[TY26669](#) (10W-30 PLUS-50™ II) (4.3 L (4.5 qt))  
 (CRANKCASE WITH FILTER)  
 Change Every 400 Hrs or Annually, whichever comes first.

**FUEL FILTER**  
[MIU800645](#) (PRIMARY)  
[MIU803127](#) (SECONDARY)  
 Change after every 400 Hrs/Annually.

**AIR FILTER**  
[M131802](#) (PRIMARY)  
[M131803](#) (SECONDARY)  
 Change every 600 hrs or annually.

**JD MULTI PURPOSE HD LITHIUM COMPLEX GREASE**  
[TY24416](#)  
**GREASE GUN**  
[TY26183](#)  
 Change As Required.

**OIL FILTER**  
[M806419](#)  
 Change Every 400 Hrs or Annually, whichever comes first.

**FUEL ELEMENT**  
[AM881823](#) (FUEL & WATER SEPARATOR)  
[M811032](#) (FILTER ELEMENT)  
 Change after every 400 Hrs. or annually.

**DIESEL PARTICULATE FILTER**  
[MIU803093](#)

**V-BELT**  
[LVU30203](#) (LGTH = 995 mm)

**FILTER PAK**  
[TA25767](#)



**ELECTRICAL**

**KEY**  
[LVU33004](#)

**ROTARY SWITCH**  
[LVA21501](#) (14 V)

**BATTERY**  
[TY27831B](#) (12 V)

**LED WORK LIGHT (OOS)**  
[LVA16474](#) (12 V)

**HEADLIGHT**  
[57M7166](#) (12 V 60/55 W)

**FUEL & AIR**

**FILLER CAP**  
[AL213202](#)

**AXLE**

**TIE ROD**  
[LVA15994](#) (ASSEMBLY)  
[LVA15996](#) (RH)  
[LVA15995](#) (LH)

**FRONT AXLE OIL**  
[TY22035](#) (John Deere Low Viscosity Hy-Gard™) (3.8 L (4 qt))  
 Change every 50/400/600 Hrs.

**TRANSMISSION/ HYDRAULIC**

**TRANSMISSION/HYDRAULIC OIL**  
[TY22035](#) (John Deere Low Viscosity Hy-Gard™) (23.5 L (24.8 qt))  
 Change after every 400 Hrs or annually.

**OIL FILTER**  
[LVA14703](#) (TRANSMISSION)  
[LVA16054](#) (HYDRAULIC)  
 Change Every 400 Hrs or Annually, whichever comes first.

