

# REPLACEMENT PARTS GUIDE

## 2038R Tractor (GH100009- ) (North America Edition)

### ENGINE

#### ENGINE OIL



**TY26669** (10W-30 PLUS-50™ II)  
(4.3 L (4.5 qt)) WITH FILTER)

Change Every 200 Hrs or Annually.

#### FUEL FILTER



**MIU800645** (PRIMARY)

**MIU803127** (SECONDARY)

Change after every 400 Hrs or Annually.

#### AIR FILTER



**M131802** (PRIMARY)

**M131803** (SECONDARY)

Change every 400 Hrs or Annually.

#### JD MULTI PURPOSE HD LITHIUM COMPLEX GREASE



**TY6341**

**GREASE GUN**

**TY26183**

Change As Required.

#### OIL FILTER



**M806419**

Change Every 200 Hrs or Annually.

#### FUEL ELEMENT



**AM881823** (FUEL & WATER SEPARATOR)

**M811032** (FILTER ELEMENT)

Change every 400 Hrs or Annually.

#### DIESEL PARTICULATE FILTER



**MIU803276**

#### FILTER PAK



**TA25767**



### ELECTRICAL



#### KEY

**LUV33004**



#### ROTARY SWITCH

**LVA21501**



#### BATTERY

**TY27831B** (12 V)



#### LED WORK LIGHT, OOS

**AM143579** (12 V)



#### HEADLIGHT

**R136239** (12 V / 55 W)

### FUEL & AIR



#### FILLER CAP

**AL213202**

### AXLE



#### TIE ROD

**LVA15994** (ASSEMBLY)

**LVA15996** (RH)

**LVA15995** (LH)



#### FRONT AXLE OIL

**TY22035** (John Deere Low Viscosity  
Hy-Gard™) (3.8 L (4 qt))

Change every 50/400/600 Hrs.

### TRANSMISSION/ HYDRAULIC



#### TRANSMISSION/HYDRAULIC OIL

**TY22035** (23.5 L (24.8 qt))

Change after every 400 Hrs or Annually.



#### OIL FILTER

**LVA14703** (TRANSMISSION)

**LVA16054** (HYDRAULIC)

Change every 200 hours.