

# REPLACEMENT PARTS GUIDE

## 3033R Compact Utility Tractor ( - MY18)

### ENGINE



**ENGINE OIL**  
[TY26668](#) (10W-30 PLUS-50™ II) (4.3 L (1.1 gal.))  
 (CRANKCASE WITH FILTER)

Change Every 400 Hrs or Annually, whichever comes first.



**FUEL FILTER**  
[MIU800645](#) (PRIMARY)  
[MIU803127](#) (SECONDARY)

Change after every 400 Hrs or Annually.



**AIR FILTER**  
[RE68048](#) (PRIMARY)  
[RE68049](#) (SECONDARY)

Change every 600 hrs or Annually.



**JD MULTI PURPOSE HD LITHIUM COMPLEX GREASE**  
[TY24416](#)  
**GREASE GUN**  
[TY26183](#)

Change As Required.



**OIL FILTER**  
[M806419](#)

Change Every 200 Hrs or Annually, whichever comes first.



**FUEL ELEMENT**  
[AM881823](#) (WATER SEPARATOR)  
[MIU802421](#) (PRIMARY ELEMENT)  
[M811032](#) (SECONDARY ELEMENT)

Change after every 400 Hrs or Annually.



 
**DIESEL PARTICULATE FILTER**  
[MIU803093](#)



**FILTER PAK**  
[TA25768](#)



### CAB



**FRESH AIR FILTER**  
[MIU10010](#)  
 Change every 50 hours.



**RECIRCULATION AIR FILTER**  
[MIU10011](#)  
 Change every 50 hours.

### ELECTRICAL



**KEY**  
[RE183935](#)



**IGNITION SWITCH**  
[LVA21501](#)



**BATTERY**  
[TY26498B](#) (12 V)



**HEADLIGHT**  
[57M7166](#) (OOS) (12 V 60/55 W)  
[R136239](#) (CAB) (12 V 60/55 W)

### FUEL & AIR



**FILLER CAP**  
[TCU32729](#) (OOS) (SN: - GG100970)  
[AL213202](#) (OOS) (SN: GG100791-) (CAB)

### AXLE



**FRONT AXLE OIL**  
[TY22000](#) (John Deere Low Viscosity Hy-Gard™) (4.8 L (1.3 gal.))  
 Change after every 600 hrs or Annually.


### TRANSMISSION/ HYDRAULIC



**TRANSMISSION OIL**  
[TY22000](#) (John Deere Low Viscosity Hy-Gard™) (25.7 L (6.8 gal))  
 Change Every 400 Hrs or Annually, whichever comes first.



**OIL FILTER**  
[LVA13065](#) (HYDRAULIC)  
 Change Every 400 Hrs or Annually, whichever comes first.

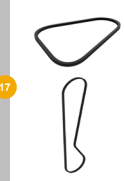

**V-BELT**  
[LVU29376](#) (ALTERNATOR) (LGTH = 1112 mm, WIDTH = 13.4 mm, THK = 9.6 mm)  
[LVU29375](#) (HVAC) (LGTH = 1508 mm, WIDTH = 13.4 mm, THK = 9.6 mm)