

REPLACEMENT PARTS GUIDE

3039R Compact Utility Tractor (- MY18)

ENGINE



ENGINE OIL
[TY26668](#) (10W-30 PLUS-50™ II) (4.3 L (1.1 gal.))
 (CRANKCASE WITH FILTER)

Change Every 200 Hrs or Annually, whichever comes first.



FUEL FILTER
[MIU803127](#) (PRIMARY)

Change after every 400 Hrs or Annually.



AIR FILTER
[RE68048](#)
[RE68049](#)

Change after every 600 hrs or Annually.



JD MULTI PURPOSE HD LITHIUM COMPLEX GREASE
[TY24416](#)
GREASE GUN
[TY26183](#)

Change As Required.



OIL FILTER
[M806419](#)

Change Every 200 Hrs or Annually, whichever comes first.



FUEL ELEMENT
[MIU803221](#) (WATER SEPARATOR)
[MIU802421](#) (FILTER ELEMENT)

Change after every 400 Hrs or Annually.



DIESEL PARTICULATE FILTER
[MIU803232](#)



FILTER PAK
[TA25768](#)



ELECTRICAL KEY



[RE183935](#)



IGNITION SWITCH
[LVA21501](#)



BATTERY
[TY26498B](#) (12 V)



HEADLIGHT
[R136239](#) (CAB) (12 V 60/55 W)

CAB



FRESH AIR FILTER
[MIU10010](#)

Change every 50 hours.



RECIRCULATION AIR FILTER
[MIU10011](#)

Change every 50 hours.

FUEL & AIR



FILLER CAP
[TCU32729](#) (OOS)
[AL213202](#) (CAB)

AXLE



FRONT AXLE OIL
[TY22000](#) (John Deere Low Viscosity Hy-Gard™) (4.8 L (1.3 gal.))
 Change after every 600 hrs or Annually.

TRANSMISSION/ HYDRAULIC



TRANSMISSION OIL
[TY22000](#) (John Deere Low Viscosity Hy-Gard™) (25.7 L (6.8 gal))
 Change Every 400 Hrs or Annually, whichever comes first.



OIL FILTER
[LVA13065](#) (HYDRAULIC)
 Change Every 400 Hrs or Annually, whichever comes first.



V-BELT
[LVU29376](#) (ALTERNATOR) (LGTH = 1112 mm, WIDTH = 13.4 mm, THK = 9.6 mm)
[LVU29375](#) (HVAC) (LGTH = 1508 mm, WIDTH = 13.4 mm, THK = 9.6 mm)