

REPLACEMENT PARTS GUIDE

3045R Compact Utility Tractor

ENGINE



ENGINE OIL
[TY26668](#) (10W-30 PLUS-50™ II) (5.7 L (1.5 gal.))
 (CRANKCASE WITH FILTER)

Change Every 200 Hrs or Annually, whichever comes first.



FUEL FILTER
[MIU800645](#) (PRIMARY)

Change after every 400 Hrs or Annually.



AIR FILTER
[RE68048](#) (PRIMARY)
[RE68049](#) (SECONDARY)

Change after every 600 hrs or Annually.



JD MULTI PURPOSE HD LITHIUM COMPLEX GREASE
[TY24416](#)
GREASE GUN
[TY26183](#)

Change As Required.



OIL FILTER
[M806419](#)

Change Every 200 Hrs or Annually, whichever comes first.

 


FUEL ELEMENT
[AM881823](#) (WATER SEPARATOR)
[M811032](#) (FILTER ELEMENT)

Change after every 400 Hrs or Annually.



CAB



FRESH AIR FILTER
[MIU10010](#)

Change every 50 hours.



RECIRCULATION AIR FILTER
[MIU10011](#)

Change every 50 hours.

ELECTRICAL

KEY



[RE183935](#)

IGNITION SWITCH



[LVA21501](#)

BATTERY



[TY26498B](#) (12 V)

HEADLIGHT



[57M7166](#) (OOS) (12 V 60/55 W)

FUEL & AIR

FILLER CAP



[TCU32729](#) (OOS) (SN: - GG200116)

[AL213202](#) (OOS) (SN: GG200117-) (CAB)

AXLE

FRONT AXLE OIL



[TY22000](#) (John Deere Low Viscosity Hy-Gard™) (4.8 L (1.3 gal.))

Change after every 600 hrs or Annually.

TRANSMISSION/ HYDRAULIC

TRANSMISSION OIL



[TY22000](#) (John Deere Low Viscosity Hy-Gard™) (25.7 L (6.8 gal.))

Change Every 400 Hrs or Annually, whichever comes first.

OIL FILTER



[LVA13065](#) (HYDRAULIC)

Change Every 400 Hrs or Annually, whichever comes first.

V-BELT



[LVU29376](#) (ALTERNATOR) (LGTH = 1112 mm, WIDTH = 13.4 mm, THK = 9.6 mm)

[LVU29375](#) (HVAC) (LGTH = 1508 mm, WIDTH = 13.4 mm, THK = 9.6 mm)



JOHN DEERE
 Genuine Parts and Service

CLICK PART NUMBER TO BUY

*See operator's manual for additional details.