

# REPLACEMENT PARTS GUIDE

## 3046R Compact Utility Tractor ( - MY18)

### ENGINE



**ENGINE OIL**  
**TY26668** (10W-30 PLUS-50™ II) (5.7 L (1.5 gal.))  
 (CRANKCASE WITH FILTER)

Change Every 200 Hrs or Annually, whichever comes first.

1



**FUEL FILTER**  
**MIU803127** (PRIMARY)

Change after every 400 Hrs or Annually.

2



**AIR FILTER**  
**RE68048** (PRIMARY)  
**RE68049** (SECONDARY)

Change after every 600 hrs or Annually.

3



**JD MULTI PURPOSE HD LITHIUM COMPLEX GREASE**  
**TY24416**  
**GREASE GUN**  
**TY26183**

Change As Required.

4



**OIL FILTER**  
**M806419**

Change Every 200 Hrs or Annually, whichever comes first.

5



**FUEL ELEMENT**  
**MIU803221** (WATER SEPARATOR)  
**MIU802421** (FILTER ELEMENT)

Change after every 400 Hrs or Annually.

6



**DIESEL PARTICULATE FILTER**  
**MIU803232**

7

 


**FILTER PAK**  
**TA25768**

8



### CAB



**FRESH AIR FILTER**  
**MIU10010**  
 Change every 50 hours.

7



**RECIRCULATION AIR FILTER**  
**MIU10011**  
 Change every 50 hours.

8

### ELECTRICAL



**KEY**  
**RE183935**

9



**IGNITION SWITCH**  
**LVA21501**

10



**BATTERY**  
**TY26498B** (12 V)

11



**HEADLIGHT**  
**R136239** (CAB) (12 V 60/55 W)

12

### FUEL & AIR



**FILLER CAP**  
**TCU32729** (OOS)  
**AL213202** (CAB)

13

### AXLE



**FRONT AXLE OIL**  
**TY22000** (John Deere Low Viscosity Hy-Gard™) (4.8 L (1.3 gal.))  
 Change after every 600 hrs or Annually.

14

### TRANSMISSION/ HYDRAULIC



**TRANSMISSION OIL**  
**TY22000** (John Deere Low Viscosity Hy-Gard™) (25.7 L (6.8 gal.))  
 Change Every 400 Hrs or Annually, whichever comes first.

15



**OIL FILTER**  
**LVA13065** (HYDRAULIC)  
 Change Every 400 Hrs or Annually, whichever comes first.

16



**V-BELT**  
**LVU29376** (ALTERNATOR) (LGTH = 1112 mm, WIDTH = 13.4 mm, THK = 9.6 mm)  
**LVU29375** (HVAC) (LGTH = 1508 mm, WIDTH = 13.4 mm, THK = 9.6 mm)

17



CLICK PART NUMBER TO BUY

\*See operator's manual for additional details.