

REPLACEMENT PARTS GUIDE

4066R Compact Utility Tractor (MY20 - MY22)(PIN:1LV4066RPLL103407-1LV4066RLPN601951)(Worldwide Edition)

ENGINE

ENGINE OIL
[TY26669](#) (10W-30 PLUS-50™ II) (5.3 L (5.6 qt))
 Change Every 400 Hrs or Annually, whichever comes first.

FUEL FILTER
[MIU803127](#)
 Change after every 400 Hrs/Annually.

AIR FILTER
[RE68048](#) (PRIMARY)
[RE68049](#) (SECONDARY)
 Change every 600 hrs. or annually.

JD MULTI PURPOSE HD LITHIUM COMPLEX GREASE
[TY6341](#)
GREASE GUN
[TY26183](#)
 Change As Required.

OIL FILTER
[M806419](#)
 Change Every 400 Hrs or Annually, whichever comes first.

FUEL-WATER SEPARATOR
[MIA885324](#) (SEPARATOR)
[MIU802421](#) (FILTER ELEMENT)
 Change after every 400 Hrs. or annually.

FILTER PAK
[TA25765](#)

DIESEL PARTICULATE FILTER
[MIU803276](#)

AXLE

TIE ROD
[LVA14951](#) (ASSEMBLY)
[LVA14960](#) (LH)
[LVA14959](#) (RH)

FRONT AXLE OIL
[TY22035](#) (John Deere Low Viscosity Hy-Gard™) (5.0 L (5.3 qt))
 Change every 600 hrs.



ELECTRICAL

KEY
[RE183935](#)

IGNITION SWITCH
[LVA21501](#)

BATTERY
[TY26442B](#) (12 V)

LED WORK LIGHT
[AM143579](#) (OOS) (12 V)
[RE593795](#) (CAB) (12 V)

HEADLIGHT
[R136239](#) (HALOGEN) (12V 60/55 W)
[TA26778](#) (LED) (12V)

FUEL & AIR

FILLER CAP
[AL213202](#)

CAB

CAB FILTER
[MIU10010](#)
 Clean or replace after every 50 hours.

RECIRCULATION AIR FILTER
[MIU10011](#)
 Clean or replace after every 50 hours.

TRANSMISSION/ HYDRAULIC

TRANSMISSION/HYDRAULIC OIL
[TY22000](#) (John Deere Low Viscosity Hy-Gard™) (47.3 L (12.5 gal))
 Change Every 1200 hours or 3 Years.

OIL FILTER
[RE45864](#) (TRANSMISSION)
[LVA10419](#) (HYDRAULIC)
 Change after every 400 Hrs. or Annually.

V - BELT
[LUVU29376](#) (ALTERNATOR) (LGTH = 1112 mm, WIDTH = 13.4 mm, TK = 9.6 mm)
[LUVU29375](#) (HVAC) (LGTH = 1508 mm, WIDTH = 13.4 mm, TK = 9.6 mm)

