

REPLACEMENT PARTS GUIDE

4044R Compact Utility Tractor (MY24-) (PIN: 1LV4044R*PR100101-) (Worldwide Edition)

ENGINE

ENGINE OIL
TY26669 (John Deere Plus-50™ II Premium)
 (10W-30) (5.4 L (5.7 qt))
 Change every 400 hrs/ Annually.

SPIN-ON FUEL FILTER
MIA882963
MIU803127
 Change after every 400 Hrs/Annually.

AIR FILTER
RE68048 (PRIMARY)
RE68049 (SECONDARY)
 Change after every 600 Hrs or annually.

JD MULTI PURPOSE HD LITHIUM COMPLEX GREASE
TY6341
GREASE GUN
TY26183
 Change As Required.

OIL FILTER
M806419
 Change after every 400 Hrs or annually, whichever comes first.

FUEL-WATER SEPARATOR
MIA885324 (SEPARATOR)
MIU802421 (FILTER ELEMENT)
 Change after every 400 Hrs or annually.


FILTER PAK
TA25765

DIESEL PARTICULATE FILTER
MIU803276

AXLE

TIE ROD
LVA14951 (ASSEMBLY)
LVA14960 (LH)
LVA14959 (RH)

FRONT AXLE OIL
TY22035 (John Deere Low Viscosity Hy-Gard™)
 (5.5 L (5.8 qt) - STANDARD)
 (8.0 L (8.5 qt) - HEAVY DUTY)
 Change every 600 hrs.

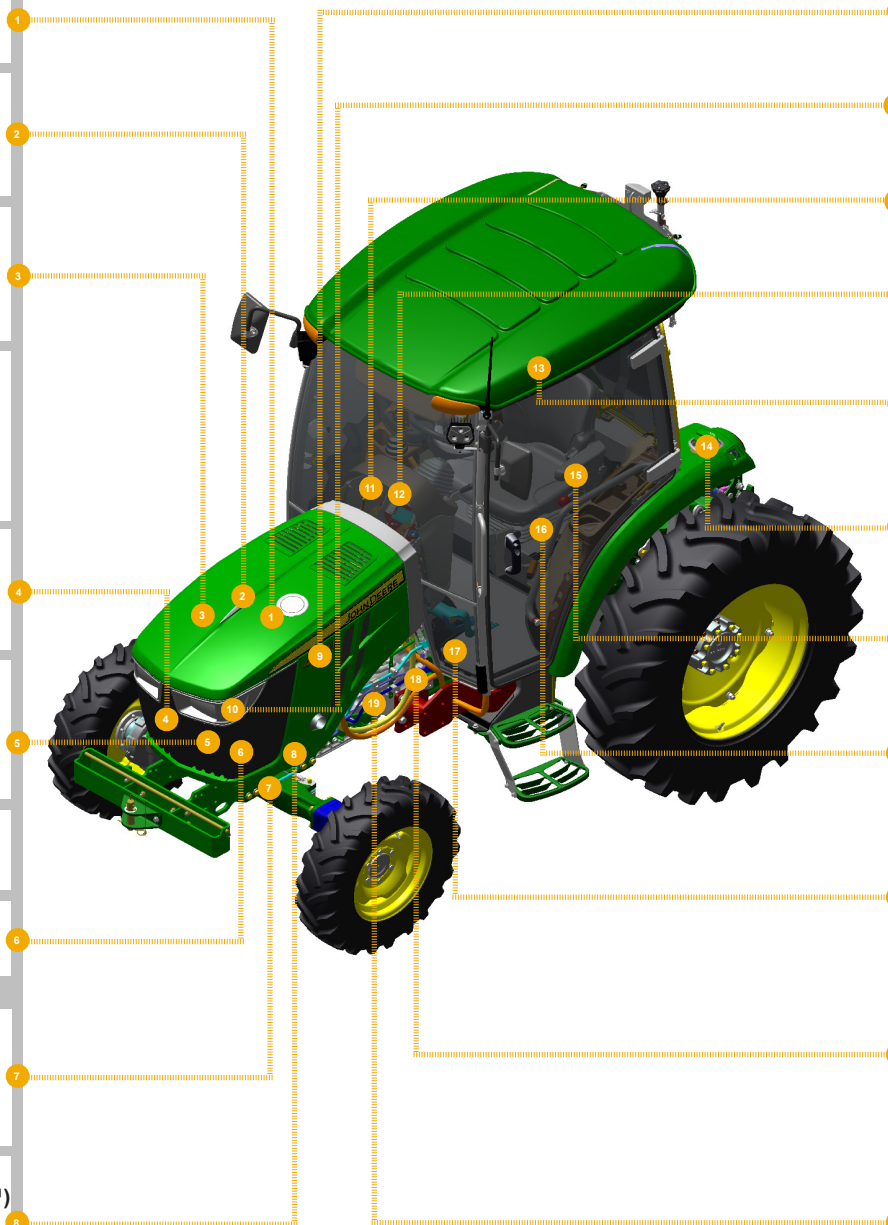

ELECTRICAL

BATTERY
TY26442B (12 V)

HEADLIGHT
TA26778 (LED) (12 V)

KEY
RE183935

IGNITION SWITCH
LVA21501 (14 V)

LED WORK LIGHT
TA25218 (OOS) (12 V)
RE593795 (CAB) (12 V)

FUEL & AIR

FILLER CAP
AL213202

CAB

CAB FILTER
MIU10010
 Clean or replace after every 50 hours.

RECIRCULATION AIR FILTER
MIU10011
 Clean or replace after every 50 hours.

TRANSMISSION/ HYDRAULIC

TRANSMISSION/HYDRAULIC OIL
TY22000 (John Deere Low Viscosity Hy-Gard™) (47.3 L (12.5 gal))
 Change after every 400 Hrs or annually

OIL FILTER
RE45864 (TRANSMISSION)
LVA10419 (HYDRAULIC)
LVA23443 (FRONT PTO FILTER)
 Change after every 400 Hrs or annually.

V - BELT
TR131486 (ALTERNATOR) (LGTH = 1112 mm, WIDTH = 13.4 mm, TK = 9.6 mm)
LUV29375 (HVAC) (LGTH = 1508 mm, WIDTH = 13.4 mm, TK = 9.6 mm)